

The N-GAGE logo is positioned in the upper right quadrant. It features the text "N-GAGE" in a bold, sans-serif font. The "N" is red, while the "GAGE" is white. The background of the entire page is a dark grey with a complex, concentric grid pattern that creates a sense of depth and perspective, resembling a tunnel or a stylized globe. A horizontal line with a red and orange gradient runs across the middle of the page, separating the header from the main content area.

N-GAGE

Issue 1

WWW.N-GAGE.COM

9356451

QUICK GUIDE FOR NOKIA MODEM OPTIONS

NOKIA

Copyright © 2003 Nokia. All rights reserved.

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited.

Nokia, Nokia Connecting People, and N-Gage are registered trademarks of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Under no circumstances shall Nokia be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice. The availability of particular products may vary by region. Please check with the Nokia dealer nearest to you.

Java is a trademark of Sun Microsystems, Inc.



© 1998-2003 Symbian Ltd. All rights reserved. Symbian and Symbian OS are trademarks of Symbian Ltd. All rights reserved.
m-Router Connectivity Components © 2000-2003 Intuwave Limited. All rights reserved. (www.intuwave.com)

Contents

Introduction	1
Installing Nokia Modem Options	1
Connecting your Nokia N-Gage device to your PC	3
Selecting your phone as a modem	4
Starting Nokia Modem Options	5
Uninstalling Nokia Modem Options	6
Important safety notes	7

Introduction

Please refer to the user's guide of the product for instructions on operation, care, and maintenance, including important safety information.

Modem Setup will install the following components on your computer:

- Nokia N-Gage data and fax modem drivers which enable you to use your phone as a modem in data and fax calls.
- Nokia Modem Options which enables you to set options for the data calls you make.

Nokia Modem Options runs on Windows 98SE/Me/2000/XP and supports the Bluetooth DUN and FAX profile.

Installing Nokia Modem Options

1. From the CD-ROM main menu, click **Software** and then click **Install now**. Click **Nokia Modem Options.exe**.
2. Follow the instructions on the screen.

If you do not have the CD Rom:

1. Download the installation file (setup.exe).
2. Go to the directory where you downloaded the file and double-click it.
3. Follow the instructions on the screen.

After the installation

Check the installed modems by selecting **Control Panel**, and **Nokia Modem Options**. The Installed Nokia Modems window lists all the installed Nokia High Speed modems. If Nokia N-Gage (Bluetooth) modem is not on the list, you need to install it manually.



Note: If you are using any other compatible Nokia phone model, select drivers with the applicable four-digit model number of that phone.

Adding the Bluetooth modem:

1. Activate the **Dial-Up Networking** profile from your Windows Bluetooth Software. Activate Bluetooth in your phone, and connect the phone to the PC. For more information on connecting your phone to the PC, see chapter Connecting your Nokia N-Gage device to your PC.
2. Open **Control Panel** and select **Phone and Modem Options**.
3. In **Phone and Modem Options** select the **Modems** tab. Click **Add...**
4. In the **Install New Modem** dialog box select the **Don't detect my modem; I will select it from a list**. Click **Next**.
5. In the **Manufacturer** list, select **Nokia**. In the **Models** list, select the modem you want to install. Click **Next**.
6. Select **Selected ports** option. On the list, select the COM port you want to install the modem on. Click **Next**.
7. If the dialog **Digital Signature Not Found** appears, read the note. Click **Yes** to continue the installation, or **No** to terminate the installation.

If you proceeded with the installation, the Nokia N-Gage (Bluetooth) modem can now be seen in the Installed Nokia Modems list in the Nokia Modem Options Control Panel applet.

Connecting your Nokia N-Gage device to your PC

1. Ensure that a Bluetooth card is inserted into the PC Card slot of your computer, and that the Bluetooth software is installed.
2. Activate the Bluetooth connection in your phone. Go to **Menu**, open the **Tools** folder and select **Bluetooth**. If you are using Bluetooth for the first time, you are asked to give a Bluetooth name to your phone. Write a name (max. 30 letters) or use the default name 'Nokia N-Gage'. Then select Bluetooth **On**.
3. Activate DUN or FAX profile in the Bluetooth software. After this, activate Bluetooth device discovery from the Bluetooth software. For information on how to do these tasks, refer to the user documentation of the Bluetooth software.
4. If you are connecting your Nokia N-Gage device to your PC using a Bluetooth connection for the first time, you need to pair the devices. To pair the devices you need to enter a passcode to both devices. Create your own passcode (1-16 characters long, numeric) and enter the same passcode to both the phone and the PC when requested. This passcode is used only once and you do not need to memorise it. For further information, refer to the Nokia N-Gage Game Deck User's Guide.
5. Authorise the connection between your Nokia N-Gage device and your PC. Select **Yes** when the connection request appears on the phone's display. You can set your

PC as authorised, which means that connection between your phone and your PC is made without separate authorisation. To do this go to the **Paired devices** view on your phone, scroll to the device and select **Options**. Select **Set as authorised**.

6. In Nokia Modem Options, select the appropriate Bluetooth modem for your phone and choose the connection settings which are appropriate for the type of modem use that you need. Finally, click OK.
7. The connection is now ready.



Note: The Nokia N-Gage data and fax modem drivers will be installed automatically during the setup.

Selecting your phone as a modem

You can use your phone with a variety of commercially available data and fax communications applications. When configuring a data or fax application, you must select your phone, Nokia N-Gage (Bluetooth), as the modem.



Note: Since Bluetooth devices communicate using radio waves, your phone and the other Bluetooth device do not need to be in line of sight. The two devices only need to be within a maximum of 10 metres of each other, although the connection can be subject to interference from obstructions such as walls or from other electronic devices. There may be restrictions on using Bluetooth devices. Check with your local authorities.

Starting Nokia Modem Options

You can start Nokia Modem Options from the Control Panel:

Click the **Start** button, point to **Settings**, and click **Control Panel**.

In the **Control Panel**, double-click **Nokia Modem Options**.

You can change data call settings even when your phone is not connected to the computer. Please refer to the Nokia Modem Options Help for information on how to set these options.



Note: GPRS is a technology that allows mobile phones to be used for sending and receiving data over the mobile network. The use of GPRS services requires that your network supports GPRS (General Packet Radio Service) technology and that you have subscribed to this service. The pricing of GPRS services may differ from that of normal GSM data services. Contact your service provider for more information.



Note: The use of GSM high speed data services requires that your network supports HSCSD (High Speed Circuit Switched Data) technology and that you have subscribed to this service. GSM high speed data services may cost more than normal GSM data services. Contact your service provider for more information.

Uninstalling Nokia Modem Options

1. Click the **Start** button, point to **Settings**, and click **Control Panel**.
2. Double-click **Add/Remove Programs**.
3. In the **Install/Uninstall** tab, select **Nokia Modem Options** from the list of software that can be removed.
4. Click **Add/Remove**.
5. Follow the instructions on the screen until the program files are removed.

Important safety notes

All the safety instructions in the user's guides of your phone and computer also apply when this product is used with the phone.

Remember to make backup copies of all important data to protect against possible loss or alteration.

Only install software from sources that offer adequate protection against harmful software.